

GROW TENTS

4' x 4' TENT MANUAL

ASSEMBLY INSTRUCTIONS:

1. Inventory and organize all parts. Poles are individually labeled with stickers.
2. Assemble the identical FLOOR FRAME and ROOF FRAME according to Figure 1. Use one A Pole for each side and connect them at the corners using the Corner Connectors. Set aside the ROOF FRAME.
3. Insert the C Poles into the connectors on the FLOOR FRAME. See Figure 2. Then insert the B Poles into the C Poles.
4. Attach the ROOF FRAME to the B Poles. See Figure 3. The tops of the B Poles fit into the Corner Connectors of the ROOF FRAME.
5. Fit the tent onto the assembled frame. This may require more than 1 person.
6. Lay the floor layer in the bottom of the tent.
7. Install D and E poles onto the ROOF FRAME, they act as crossbeams, see Figure 4. These poles are used to hang growing equipment. Positioning of poles should distribute weight evenly, but may vary depending on personal preference and individual set up. Use caution when hanging objects. It is not recommended to hang objects more than 40 lbs.

PARTS INVENTORY:

- (8) CORNER CONNECTORS
- (8) A POLES
- (4) B POLES
- (4) C POLES
- (2) D POLES
- (1) E POLE
- TENT
- FLOOR LAYER

FIGURE 1

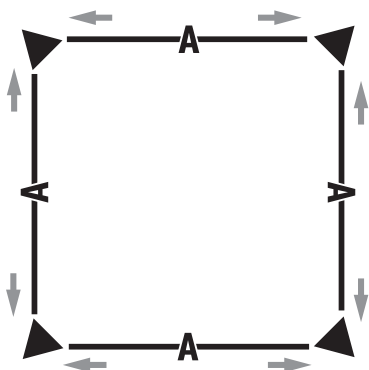


FIGURE 2

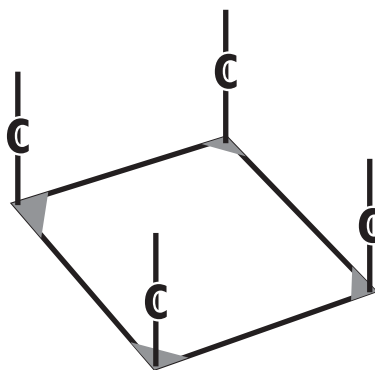


FIGURE 3

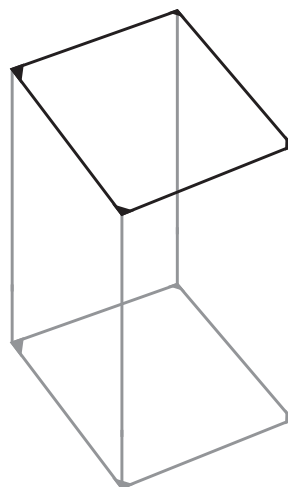


FIGURE 4

