
Hurricane

HIGH VELOCITY METAL DRUM FAN 24"

AMPS: 2 / WATTS: 200 / VOLT: 120

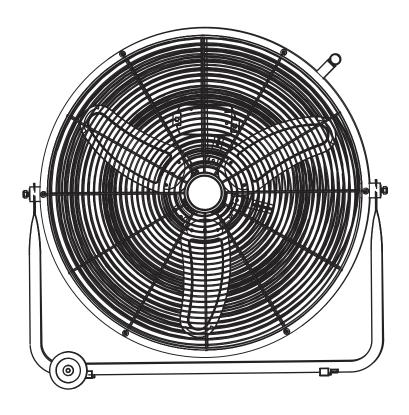

READ AND SAVE
THESE INSTRUCTIONS

WARNING


- To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- 2. This fan is suitable for commercial use only and should only be placed on floor.
- 3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. Children should be supervised to ensure that they do not play with the appliance.
- 4. Do not leave the fan running unattended.
- 5. Please make sure the voltage of the power supply is the same as shown on the fan nameplate.
- To reduce the risk of electric shock or injury to persons, make sure unit is turned off and unplugged from electrical outlet before cleaning.

RULES FOR SAFETY OPERATION

- 1. Never leave the fan running unattended. Unplug the fan when not in use or cleaning.
- 2. Position fan in an area that is free from obstructions. This will help to keep the fans air intake and discharge grill free from blockage.
- 3. Be sure fan is on a stable surface when operating to avoid overturning.
- 4. Never insert fingers, pencils, or any other object through the grille when fan is running.
- 5. Unplug the fan when moving from one location to another.
- 6. Never connect the fan to a power source while disassembled.
- 7. DO NOT use fan in window, rain may create electrical hazard.
- 8. High velocity fans are designed to create rapid air movement, therefore, make sure the fan is not placed near drapes, curtains or any objects that may drawn into the fan outlet.
- 9. The rules for the cord and plug as follows:
 - (1) Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
 - (2) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

ASSEMBLY INSTRUCTIONS

Fan comes fully assembled.

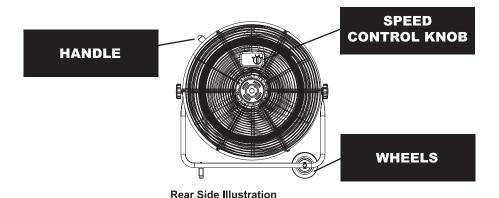

OPERATING INSTRUCTIONS

- 1. Only operate the fan with the recommended voltage designated on the fan rating label.
- To adjust fan speed turn the speed control knob located on the switch box to the desired speed: 0 — Stop 1 — Low 2 — Medium 3 — High
- 3. Grasp the handle and adjust the tilt angle up or down to desired position.


CLEANING AND MAINTENANCE INSTRUCTIONS

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

- 1. Before cleaning and assembling, unplug power cord from electrical outlet.
- To ensure adequate air circulation to the motor, keep vents at the rear of the motor housing from dust, fluff and etc. A vacuum cleaner can not be used to clean these vents before it is unpluged.
- 3. Please wipe the exterior parts with a soft cloth soaked in a mild detergent. Do not use any abrasive detergent or solvents to avoid scratching the surface. Do not use gasoline or thinner as a cleaner.
- 4. Do not allow water or any other liquid into the motor housing or interior parts.
- 5. If power cord is damaged, it's strongly recommended to request a specialist to handle.

FAN BLADE & FRONT GRILL CLEANING

- (1) Use a screwdriver to remove the screws at the front grill.
- (2) Remove the front grill.
- (3) Clean the fan blade and grill with a soft damp cloth. DO NOT ATTEMPT TO REMOVE THE FAN BLADE. Do not allow the motor or other electrical components to be exposed to water.
- (4) Reassemble the fan after cleaning by reversing above procedure.

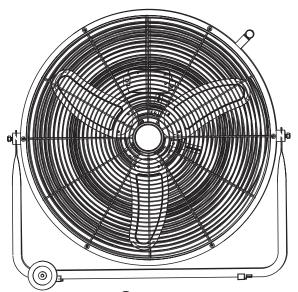

Hurricane

HIGH VELOCITY METAL DRUM FAN 24"

Part #736470

Use a "QR Code App" on your smart phone to access our website and browse our entire product offering or go to: www.hurricane-fans.com







