


EXTENDING THE STANDING POLE:

Loosen the height adapter on the standing pole .
Then pull the upper inner tube of the standing pole to the desired height and re-tighten the height adapter

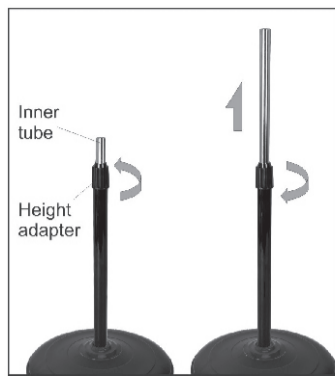

SPEED CONTROL: Select air speed by setting switch to either high-low-off.

CLEANING

WARNING: Unplug from electrical supply source before cleaning.

1. Use soft damp cloth then wipe with dry cloth.
2. Do not use harmful cleaners to paints or plastics.
3. Do not bend the blades.

IMPORTANT: Surges in electrical power or excessive heat may cause the fan to turn off. Wait approximately 15 minutes for the fan to resume operation.

RATING

FE8-50S3dO(5): 120V~ 60Hz 1.25A 150W



OSCILLATING PEDESTAL FAN OWNER'S MANUAL

FE8-50S3dO(5)



Please read the instructions carefully before use

READ AND SAVE THESE INSTRUCTIONS

CAUTION: Read and follow all instructions before operating fan.
Do not use fan if any part is damaged or missing.

WARNING:

- To reduce the risk of fire or electrical shock, do not expose to water or rain.
- To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device.
- Automatically operated device - To reduce the risk of injury, disconnect from power supply before servicing.
- If the power supply cord is damaged, contact your local service center or a qualified electrician to install an appropriate replacement cord to prevent any injury or damage.
- The appliance does not apply to be used in locations where special conditions prevail, such as the presence of a corrosive or explosive atmosphere (dust, vapour or gas).
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.


RULES FOR SAFE OPERATION:

1. Never insert fingers or any other objects through the grill guard when fan is in operation.
2. Disconnect the fan from its power source when moving from one location to another.
3. Disconnect the fan from its power source when removing guards for cleaning.
4. Be sure fan is on a stable, flat surface when in operation.
5. Do not use fan in windows. Rain and moisture may create electrical hazard.
6. Close supervision is necessary when this fan is used near children, the elderly and pets.
7. Do not place the fan near an open flame, cooking or heating appliance, or hot surface.
8. This fan should not be operated outside.

CAUTION: Do not alter the fan's assembly.

WARNING: Be sure that both front and rear guard screws are completely tightened in locking position before operation.

FAN ASSEMBLY INSTRUCTIONS

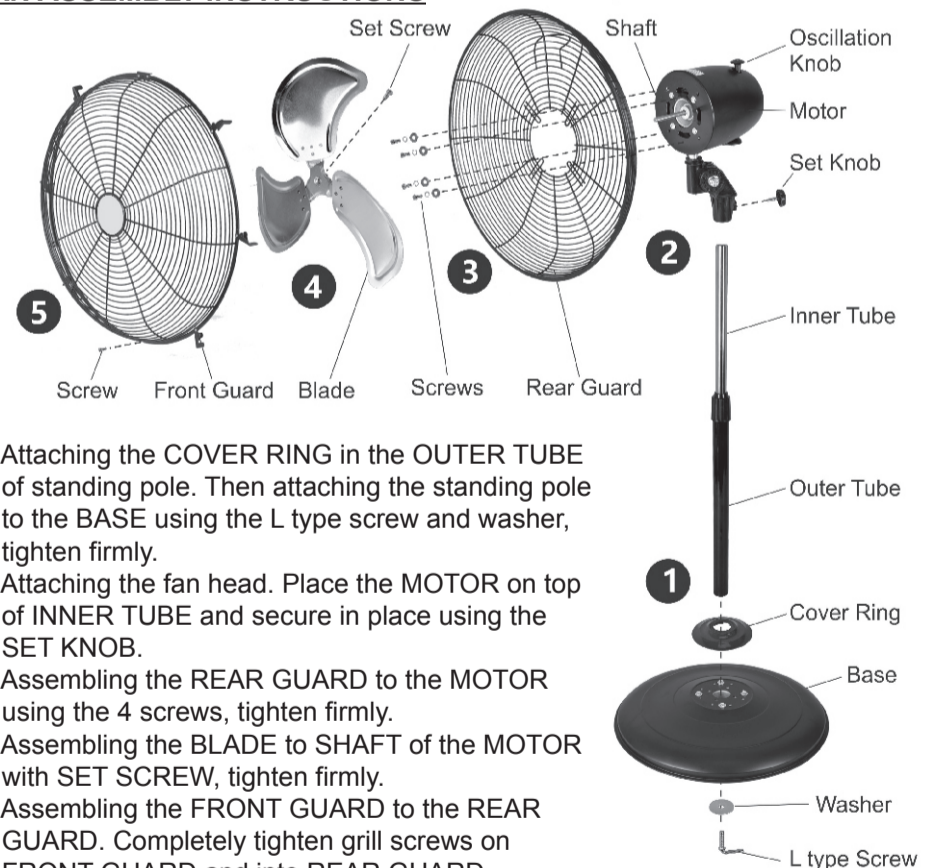

1. Attaching the COVER RING in the OUTER TUBE of standing pole. Then attaching the standing pole to the BASE using the L type screw and washer, tighten firmly.
2. Attaching the fan head. Place the MOTOR on top of INNER TUBE and secure in place using the SET KNOB.
3. Assembling the REAR GUARD to the MOTOR using the 4 screws, tighten firmly.
4. Assembling the BLADE to SHAFT of the MOTOR with SET SCREW, tighten firmly.
5. Assembling the FRONT GUARD to the REAR GUARD. Completely tighten grill screws on FRONT GUARD and into REAR GUARD.

OPERATING INSTRUCTIONS

SETTING OSCILLATING MODE:

1. TO MAKE THE FAN OSCILLATE: Press down the oscillation knob at the top of the fan head. (See Figure A.)
2. TO STOP THE FAN OSCILLATE: Pull up the oscillation knob at the top of the fan head. (See Figure B.)

