



OWNER'S MANUAL

16" Oscillating Wall Mount Fan

SKU: AG-WF16L02M



READ AND SAVE THESE INSTRUCTIONS

Attention: Pictures in the manual are for reference only.

IMPORTANT SAFEGUARDS

Caution

Read Rules for Safe Operation and Instructions Carefully.

WARNING

1. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
2. To reduce the risk of fire or electric shock, DO NOT use this fan with any solidstate speed control devices.

RULES FOR SAFE OPERATION

1. Never insert fingers, pencils, or any other object through the grille when fan is running.
2. Disconnect fan when moving from one location to another.
3. Be sure fan is on a stable surface when operating to avoid overturning.
4. DO NOT use fan in window, rain may create electrical hazard.
5. Household use only.
6. Ensure that the fan is switched off from the supply mains before removing the grille.

The rules about cord and plug as below

 
1. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the products. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

RULES FOR SAFE OPERATION

The rules about cord and plug as below

2. Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
3. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

PART FIGURE

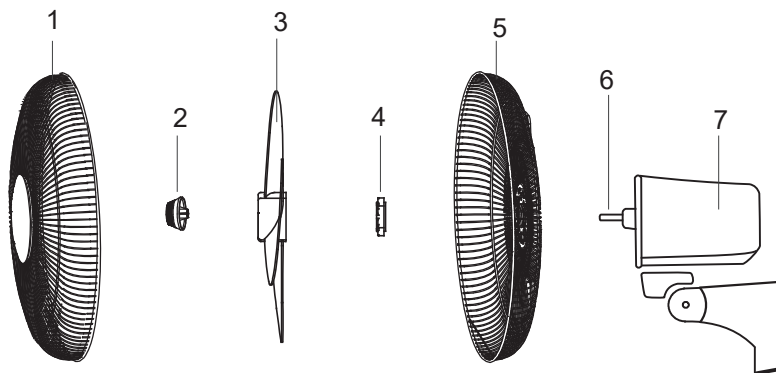




PART FIGURE

NO.	Description	NO.	Description
1	Front Grill	5	Rear Grill
2	Spinner	6	Motor shaft
3	Blade	7	Motor
4	Plastic nut		

Note:

All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject.

   
GRILL & FAN BLADE ASSEMBLY

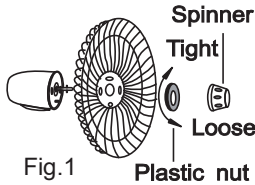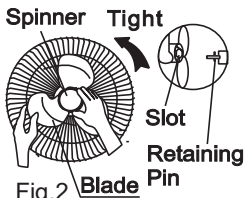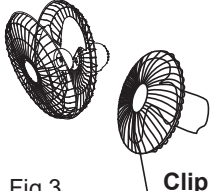 <p>Fig.1</p>	<p>1. Unscrew the spinner clockwise (or take the spinner out from the bag) and the plastic nut counterclockwise to remove both of them. Fix the rear grill to the motor then tighten the plastic nut again. (Fig. 1)</p>
 <p>Fig.2</p>	<p>2. Insert the blade into shaft, and make sure the rotor shaft pin is fitted into groove of the blade. Turn the spinner counterclockwise to tighten the blade. (Fig. 2)</p>
 <p>Fig.3</p>	<p>3. Fasten the front grill and the rear grill by the grill clip (Fig. 3)</p>

OPERATING INSTRUCTION


The fan should be installed on a solid wooden or pillar which stands vertically to the floor.

 Caution : To prevent the fan from falling off, do not install it on walls less than 10 cm thick or made of materials that are easily damaged.

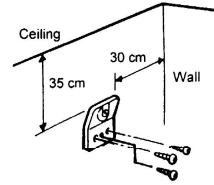

Installing the mounting bracket

 
Fix the supplied mounting bracket firmly to the wall using the three screws.

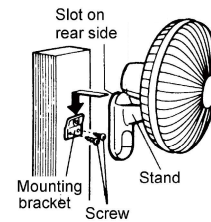

Installing the stand

Mount the stand on the bracket by inserting the bracket catch into the slot on the stand.

 Fix the stand onto the bracket with a retaining nut.

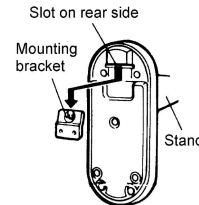

SPEED ADJUSTMENT

Adjust to the desired speed by pulling the switch cord (A).

 
0---Off 1---Low 2---Medium 3---High

OSCILLATION CONTROL

Pull switch cord (B) to start and stop oscillation.

TO ADJUST THE WIND DIRECTION

Push the guard lightly to the desired up or down direction.

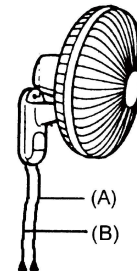

Note:

 
The bracket should be positioned at least 35 cm from the ceiling and at least 30 cm from adjoining wall.

Note:

If the retaining nut does not pass through the holes, push the stand downwards until it is fully mounted on the bracket.

USER SERVICING INSTRUCTIONS

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
3. Remove fuse carefully. Insert the tip of your tool into fuse slot (close with the terminal), then prize the fuse gradually and slowly, but not overexert. If you feel tight, you can try it at several times and prize the fuse little by little. When one side of the fuse has been prized, then you can get the fuse out entirely.
4. Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse.
5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
6. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

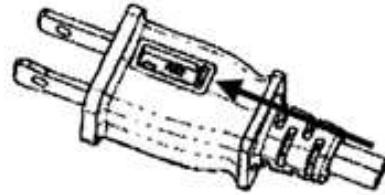

Notice:

1. When you replace the fuse, please don't operate suddenly or overexert, or else the product will be damage or cause accident.
2. When you feel it hard to be operated, please make sure you have got the right way.

CLEANING

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with mild soap and a damp cloth or sponge. Thoroughly to remove soap film with clean water.
3. Be sure not to make water or other liquid enter inside of motor.



1500 S. MILLIKEN AVE STE B.
ONTARIO, CA 91761

www.airgreen.com