




HIGH VELOCITY AIR CIRCULATOR

MODELS:
OSCW-24M
OSCW-30M

INSTRUCTION MANUAL

INDOOR/OUTDOOR

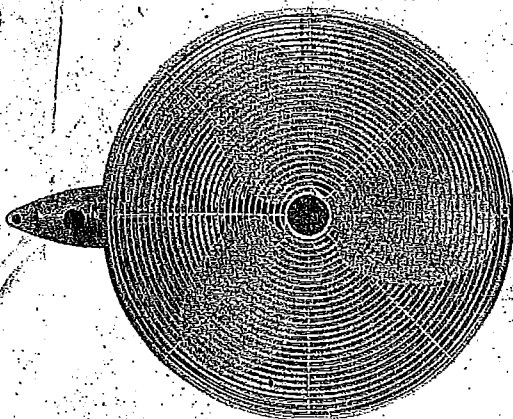

READ&SAVE THESE INSTRUCTIONS

HIGH VELOCITY OSCILLATING WALL MOUNT FAN ASSEMBLY AND OPERATION INSTRUCTIONS

CAUTION:
Read and follow all instructions before operating fan. Do not use if any part is damaged or missing.

WARNING:
To reduce the risk of fire or electrical shock, **DO NOT** use this fan with any solid state speed control device. This appliance has a 3-prong grounded plug that must be inserted into a matching outlet. To reduce the risk of electrical shock, this grounding plug must not be cut off the plug. Where a two-prong wall outlet is encountered, it must be replaced; contact a qualified electrician. **DO NOT** attempt to defeat this safety feature. Use your fan only with adequate wiring that is up to code. Connect to properly grounded outlets only.

NOTE: Installation of this equipment should be performed by a qualified person. We do not warrant any damage or injuries as a result of improper installation.

This fan is suitable for wet location. Suitable for Use In Wet Locations When Installed In A GFCI Protected Branch Circuit.

RULES FOR SAFE OPERATION:

- Always unplug unit for cleaning.
- Always unplug unit when not in use.
- Do not place foreign objects through guard into the blade.
- Do not operate without fan guards properly locked.
- Do not use this fan with an extension cord.
- Do not place fan or any parts near an open flame, cooking or other heating appliance.
- Do not operate this unit with a damaged cord or plug, especially when this unit has been malfunctioned, dropped or damaged.

UNPACK YOUR FAN AND CHECK THE CONTENTS

- Motor Assembly
- Front / Rear Grille & Blade
- Wall Mounting Pipe & Base
- Owner's Manual & Hardware Package

MOUNTING BASE ON A WOOD FRAMED WALL

1. Located a wall stud secure and solid enough to hold the weight of the base assembly. Carefully located and mark the center of wall stud. If you do not have a solid structural framing member at that location then you must provide an adequate alternative for mounting the fan.
2. Place mounting bracket (1) against the wall centered with the centerline of the wall stud and 4 holes.
3. Drill 4 holes on the wall and secure bracket to wall using 3 lag screws (3) provided.

If mounting on a concrete wall, be sure to locate a structurally solid and secure location to hold the weight of the fan assembly and use suitable concrete anchors (not provided) to mount the base to the wall.


MOUNTING PIPE & BASE ASSEMBLY

1. Put one end of the pipe (4) into the slot in the base.
2. Carefully insert the position knob (2) and tighten it to hold the pipe.

WALL MOUNT BRACKET/ MOTOR ASSEMBLY

1. Remove the 2 bolts (9), washers (6) and nuts (5) from the wall mount pipe(4).
2. Align the holes on the pipe with the holes in the motor flange on the motor assembly.
3. Insert the bolts (9) and replace the washers and nuts removed in step 1.
4. Adjust the tilt to the desired position and tighten the pivot knob (8) to set the angle.
5. Tighten the position bolt and nut.

CAUTION: BE SURE TO SECURE THE KNOB.

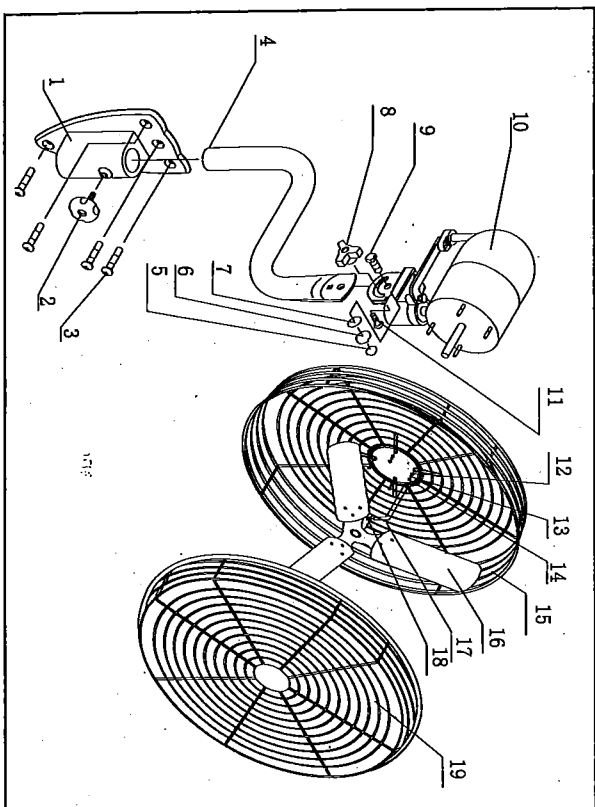

MOTOR / REAR GRILLE & BLADE ASSEMBLY

1. Removed the 4 nuts, spring washers and flat washers (12,13,14) from the bolts around the motor shaft.
2. Carefully slide the rear grille (15) over the bolts.

3. Secure with the flat washers, spring washers and nuts removed in Step 1.
4. Carefully slide the blade assembly (16) over the shaft and align the inner hex head driver (18) provided with the slot on the shaft of the motor.
5. Tighten the blade assembly (16) with the screws using a Philips-head screwdriver (not provided).

CAUTION: DO NOT ALTER THE ANGLE OF THE BLADES.

FRONT GRILLE ASSEMBLY

1. Hang front grille (19) on top rib of rear grille (15) by utilizing the hook.
2. Snap the front grille into the rear grille to secure.

OPERATION INSTRUCTIONS:

1. Change the setting on the speed control to the desired operating speed. The pull chain controls the fan speed as follows: 1 pull -Low, 2 pulls-Medium, 3 pulls-High and 4 pulls-Off.
2. To change the tilting angle of the Fan Head, Loosen the Tilt Adjustment Knob on the fan head joint, tilt the Fan Head to the desired angle and tighten pivot knob.
3. To make the fan oscillate, pull up on the oscillating knob located on the bottom of the motor housing. To stop the fan from oscillating, push down on the oscillating knob.

CLEANING

WARNING: Unplug from electrical supply source before cleaning. After servicing, any safety device (including grills and blades) must be reinstalled or remounted as previously installed. Use soft damp cloth then wipe with dry cloth. Do not use harmful cleaners. Do not bend the blades.

If you should have any operation question, contact us toll free at 800-998-2398.