


Hurricane®

16" OSCILLATING WALL MOUNT FAN

OWNER'S MANUAL

Product No: #736503

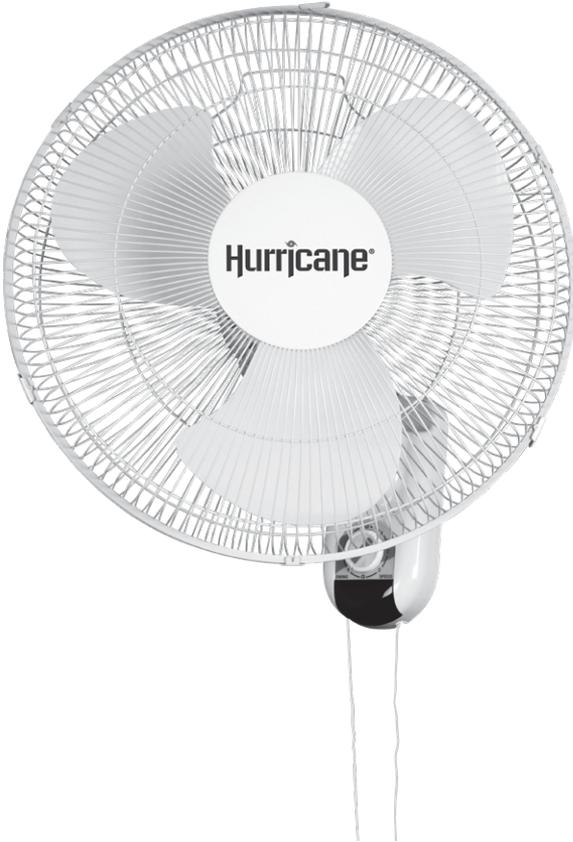

READ AND SAVE THESE INSTRUCTIONS

NOTE: Pictures in manual are for reference only.

W
I
S
S
A
E
L
L
E

CAUTION

Read and follow all instructions before operating fan. DO NOT use fan if any parts are damaged or missing.


WARNING

1. This appliance is not intended for use by young children without supervision.
2. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only. If the plug does not fit fully into the outlet, reverse the plug. If the plug still does not fit, contact a qualified electrician. **Do not attempt to bypass this safety feature.**
3. If the power cord is damaged, it must be replaced by manufacturer.
4. To reduce the risk of fire or electrical shock, DO NOT use this fan with any solid state speed control device.
5. Changes or modifications to this unit will void the user's warranty.

RULES FOR SAFE OPERATION

1. Never insert any object through the housing when the fan is running.
2. Disconnect power when moving fan from one location to another.
3. Disconnect power when removing fan grilles for cleaning.
4. Be sure the fan is on a stable, flat surface when in operation.
5. Important cord and plug information:
 - (A) This product uses overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse burns out, unplug the product from the outlet. Replace the fuse by referencing the instructions (follow product marking for proper fuse rating) and test the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized retail store for examination, repair, and/or replacement.
 - (B) DO NOT operate any fan with a damaged cord or plug. Discard or return the fan to an authorized retail store.
 - (C) DO NOT run power cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. DO NOT route cord under furniture or appliances.




COMPONENTS

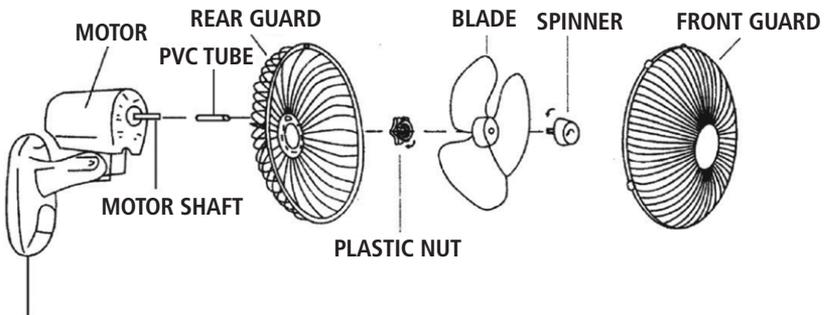

GUARD & FAN BLADE ASSEMBLY

Follow these assembly instructions carefully.

1. Unscrew the spinner clockwise (or take the spinner out of the bag). Then unscrew the plastic nut counter-clockwise and remove. Fix the rear guard to the motor, then tighten the plastic nut again. **(Fig. 1)**
2. Discard PVC sleeve on shaft. Insert the blade into shaft, and make sure the rotor shaft pin is fitted into the groove of the blade. Turn the spinner counter-clockwise to tighten the blade. **(Fig. 2)**
3. Fasten the front guard and the rear guard using the guard clip. **(Fig. 3)**

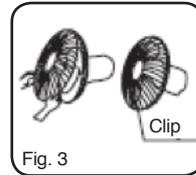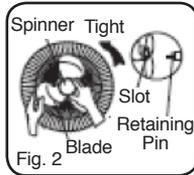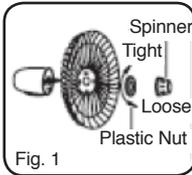


INSTALLATION

The fan should be installed on solid wood or a pillar that is secured perpendicular to the floor.


CAUTION: To prevent the fan from falling off, do not install it on walls less than 4 inches thick or those made from materials that are easily damaged.

INSTALLING THE MOUNTING BRACKET

Fix the supplied mounting bracket firmly to the wall using the three screws.

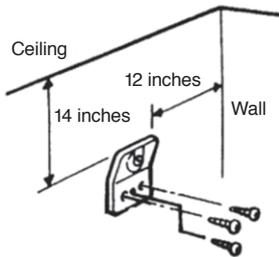


NOTE: The bracket should be positioned at least 14 inches from the ceiling and at least 12 inches from adjoining wall.

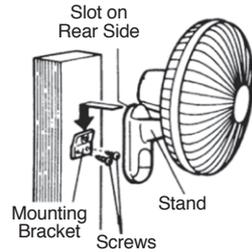

INSTALLING THE STAND

Mount the stand on the bracket by inserting the bracket catch into the slot on the stand.

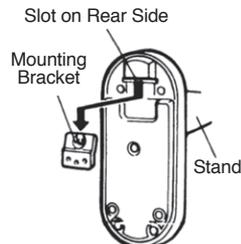


SPEED ADJUSTMENT

Set desired speed by pulling the pull switch **(A)**.
0---Stop 1---Low 2---Medium 3---High


OSCILLATION CONTROL

Adjust the angle of oscillation by pulling the pull switch **(B)**. Then, push the guard lightly up or down to reach the desired position.

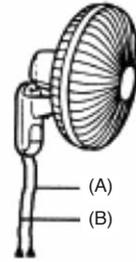

USER-SERVICING INSTRUCTIONS

1. Grasp the plug and remove it from the receptacle or other outlet device. DO NOT unplug by pulling on the cord.
2. Open the fuse cover. Slide open the fuse access cover on top of the attachment plug, toward the blades.
3. Remove the fuse carefully. Push the fuse from the other side or turn the fuse holder over to remove the fuse.
4. Warning: Using the wrong voltage fuse can lead to risk of fire. Replace the fuse only with a 2.5 A, 125 volt fuse.
5. Close the fuse cover. Slide the fuse access cover on top of the attachment plug to the closed position.
6. Warning: risk of fire. DO NOT replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

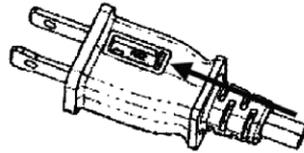

CLEANING

1. Be sure to unplug from the power source before cleaning.
2. Plastic parts should be cleaned with mild soap and damp cloth or sponge. Thoroughly remove soap film with clean water.
3. Be sure not to let water or other liquid enter the inside of the motor.

Hurricane®

16" OSCILLATING WALL MOUNT FAN

Product No: #736503



HAWTHORNE GARDENING™

CO

Manufactured for Hawthorne Hydroponics LLC, a subsidiary of The Hawthorne Gardening Company, 3204 NW 38th Circle, Vancouver, WA 98660

HawthorneGC.com | Canada: HawthorneGC.ca

©2019. World rights reserved.