

Remote Manual



Olympus Series
Cassette Air Handlers

The design and specifications are subject to change without prior notice.
Consult with the sales agency or manufacturer for details.

For more info visit www.mrcool.com



Olympus Series
Cassette Air Handlers

 
Please keep this manual where the operator can easily find it.
Inside you will find helpful hints on how to use and maintain your
unit properly.

For more info visit www.mrcool.com

CONTENTS

Handling the remote control	2
Remote control specifications.....	3
Function buttons	4
Indicators on LCD	7
How to use the buttons	
Initial setting the clock	8
Auto operation.....	9
Cooling/Heating/Fan operation.....	9
Dehumidifying operation	10
Adjusting air flow direction.....	10
Timer operation.....	11
Example of Timer setting	12

Handling the remote control

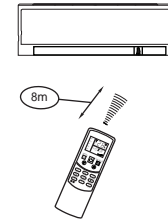

Location of the remote control.

- Use the remote control within a distance of 26.25 feet from the appliance, pointing it towards the receiver. Reception is confirmed by a beep.
- Keep the remote control where its signals can reach the receiver of the unit.

▲ CAUTIONS

- The air conditioner will not operate if curtains, doors or other materials block the signals from the remote control to the indoor unit.
- Prevent any liquid from falling into the remote control. Do not expose the remote control to direct sunlight or heat.
- If the infrared signal receiver on the indoor unit is exposed to direct sunlight, the air conditioner may not function properly. Use curtains to prevent the sunlight from falling on the receiver.
- If other electrical appliances react to the remote control, either move these appliances or consult your local dealer.

Replacing batteries

The remote controller is powered by two dry batteries(R03/LR03X2) housed in the rear part and protected by a cover.

- (1) Remove the cover by pressing and sliding it.
- (2) Remove the old batteries and insert the new batteries, placing the(+) and (-) ends correctly.
- (3) Reattach the cover by sliding it back into position.

NOTE: When the batteries are removed, the remote control erases all programming. After inserting new batteries, the remote control must be reprogrammed.

▲ CAUTIONS


- Do not mix old and new batteries or batteries of different types.
- Do not leave the batteries in the remote control if they are not going to be used for 2 or 3 months.
- Do not dispose batteries as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

Remote Control Specifications

Model	RG05F2/BGEU1, RG05F3/BGEFU1
Rated Voltage	3.0V(Dry batteries R03/LR03 x2)
Signal Receiving Range	8m
Environment	23°F~140°F(-5°C~60°C)

Performance Feature

 1. Operating Mode: AUTO, COOL, DRY, HEAT(cooling & heating models only), and FAN.
2. Timer Setting Function in 24 hours.
3. Indoor Setting Temperature Range : 62°F~86°F(17°C~30°C).
4. Full function of LCD (Liquid Crystal Display).

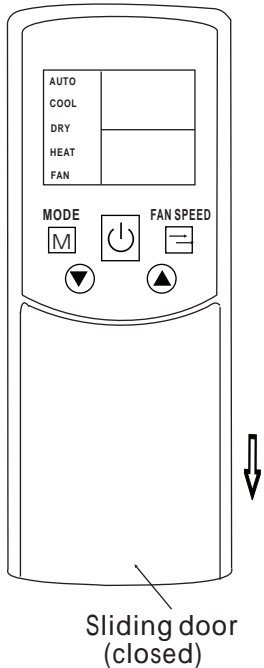


NOTE:

- Buttons design is based on typical model and might be slightly different from the actual one you purchased the actual shape and layout may vary.
- All the functions described are accomplished by the unit. If the unit has no this feature, there is no corresponding operation happened when press the relative button on the remote control.
- If there are any differences between the "Remote Control Manual" and "User Manual" on function description, follow the description in "User Manual".

3

 Function buttons

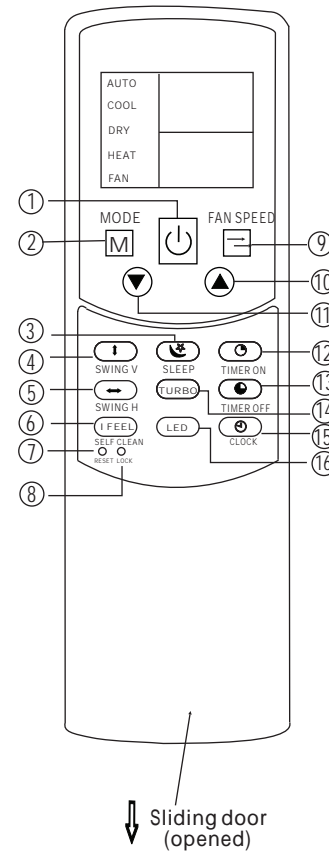


RG05F2/BGEU1

1 ON/OFF Button

Operation starts when this button is pressed and stops when this button is pressed again.

2 MODE Button

 Each time the button is pressed, the operation mode is selected in a sequence of following:



NOTE: Please do not select HEAT mode if the machine you purchased is cooling only. Heat mode is not supported by the cooling only appliance.

3 SLEEP Button

Active/Disable sleep function. It can maintain the most comfortable temperature and save energy. This function is available on COOL, HEAT or AUTO mode only .

NOTE: While the unit is running under SLEEP mode, it would be cancelled if MODE, FAN SPEED or ON/OFF button is pressed.

4 SWING V Button

 
Used to stop or start horizontal louver movement or set the desired up/down air flow direction. The louver changes 6 degree in angle for each press. If keep pushing more than 2 seconds, the louver will swing up and down automatically.

5 SWING H Button

Used to stop or start vertical louver movement and set the desired left/right air flow direction. The vertical louver changes 6 degree in angle for each press. And the temperature display area of indoor unit displays "rr" for one second. If keep pushing more than 2 seconds, the vertical louver swing feature will activate. And the display area of indoor unit displays "IIII", flashes four times, then the temperature setting reverts back. If the vertical louver swing feature is stopped, it displays "LC" and remains on for 3 seconds.

NOTE: For some units, the indoor unit displays "ON" when the swing feature is activated, and displays "OF" when the swing feature is stopped.

4

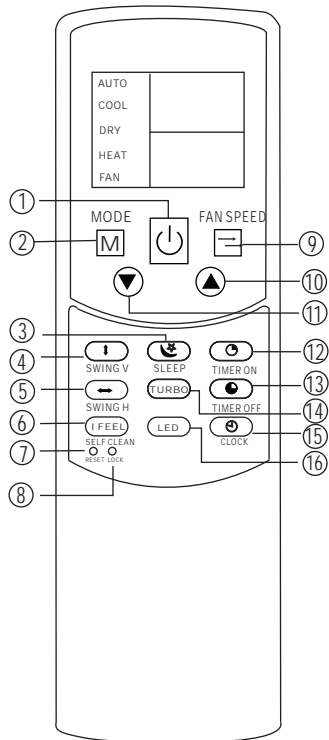Function buttons (continued)

6 I FEEL /SELF CLEAN Function

- Press this button less than 2 seconds will initiate I FEEL function. And if this button is held for more than 2 seconds, the SELF CLEAN function is initiated.
- When the I FEEL function is activated, the remote displays the actual temperature of its location. The remote control will send this signal to the air conditioner every 3 minutes interval until the I FEEL button is pressed again. This indicator light "☺" remains on.
- The I FEEL function is not available under DRY and FAN mode.
- Switching the operation mode or turning off the unit will cancel the I FEEL function automatically.
- Under SELF CLEAN mode, the air conditioner will automatically clean and dry the Evaporator and keep it fresh for the next operation.

7 RESET Button

Once the recessed RESET button is pressed, all of the current settings will be cancelled and the control will return to the initial settings.

8 LOCK Button

Press this recessed button to lock all current settings, and the remote control will not accept any operation except that of the LOCK. Use the LOCK mode when you want to prevent settings from being changed accidentally. Press the LOCK button again to cancel the LOCK function. A lock symbol will appear on the remote controller display when the lock function is activated.

 
9 FAN SPEED Button

Used to select the fan speed in four steps:

AUTO—LOW—MED—HIGH

10 UP Button

Push this button to increase setting temperature or to increase Hour during Clock time setting.

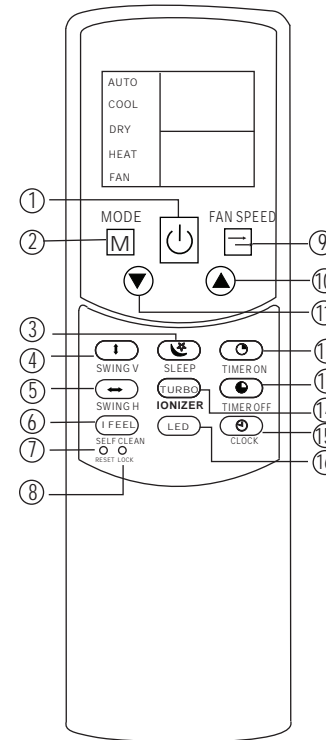
RG05F3/BGEFU1
11 DOWN Button

Push this button to decrease setting temperature or to decrease Hour during Clock time setting.
NOTE: Press and hold UP and DOWN buttons together for 3 seconds will alternate the temperature display between the °C & °F scale.

12 TIMER ON Button

Press this button to activate the Auto-on time setting. Each press will increase the time setting in 30 minutes increments, up to 10 hours, then at 1 hour increments up to 24 hours. To cancel the Auto-on time setting, just press the button until the time setting is 0.0.

13 TIMER OFF Button

Press this button to activate the Auto-off time setting. Each press will increase the time setting in 30 minutes increments, up to 10 hours, then at 1 hour increments up to 24 hours. To cancel the Auto-off time setting, just press the button until the time setting is 0.0.

14 TURBO Button(RG05F2/BGEU1)

Active/Disable Turbo function.

TURBO/IONIZER Button(RG05F3/BGEU1)

- Active/Disable Turbo function. Holding this button down for 2 seconds will activate the Ionizer function.
- Turbo function enables the unit to reach the preset temperature at cooling or heating operation in the shortest time(if the indoor unit does not support this function, there is no corresponding operation when this button is pressed.)
- When the Ionizer function is initiated, the Ionizer/Plasma Dust Collector(dependent on models) is energized and will help to remove pollen and impurities from the air.

 
15 CLOCK Button

Used to set the remote clock.

16 LED Button

Disable/Active indoor screen Display.

Indicators on LCD

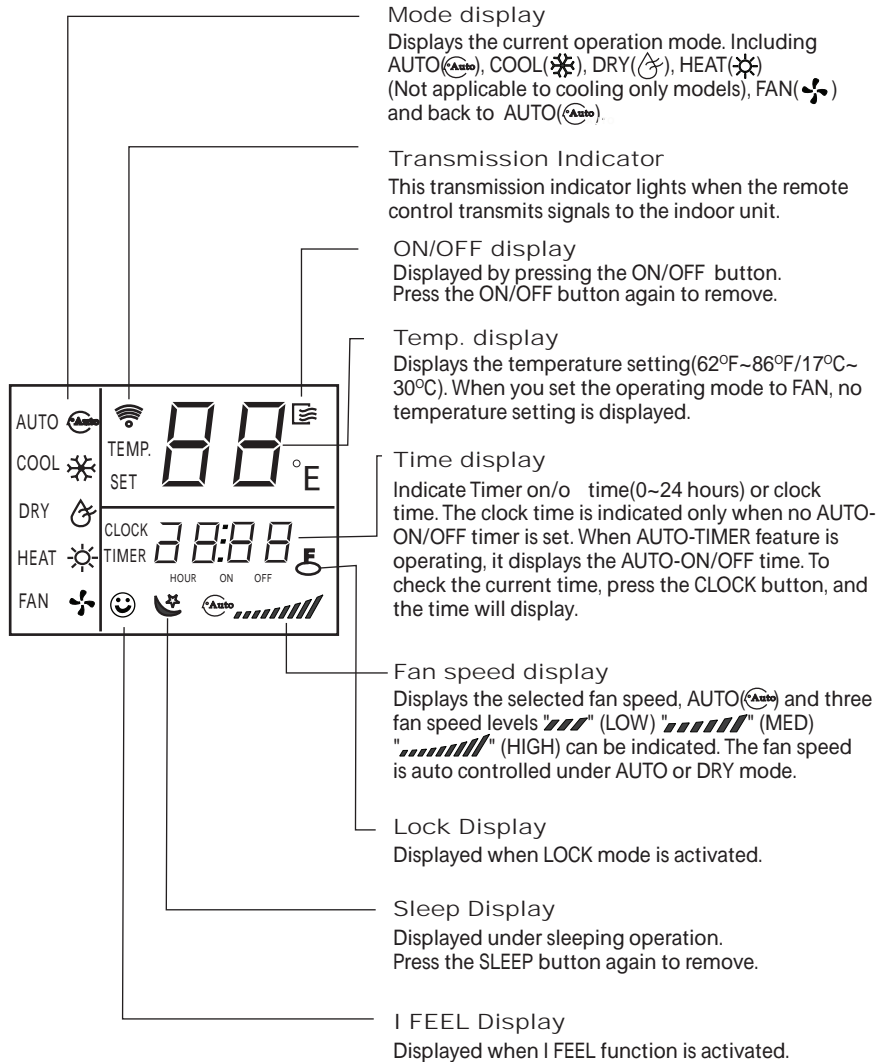

Mode display
 Displays the current operation mode. Including AUTO (Auto), COOL (❄️), DRY (☁️), HEAT (☀️) (Not applicable to cooling only models), FAN (🌀) and back to AUTO (Auto).

Transmission Indicator
 This transmission indicator lights when the remote control transmits signals to the indoor unit.

ON/OFF display
 Displayed by pressing the ON/OFF button. Press the ON/OFF button again to remove.

Temp. display
 Displays the temperature setting (62°F~86°F/17°C~30°C). When you set the operating mode to FAN, no temperature setting is displayed.

Time display
 Indicate Timer on/off time (0~24 hours) or clock time. The clock time is indicated only when no AUTO-TIMER feature is set. When AUTO-TIMER feature is operating, it displays the AUTO-ON/OFF time. To check the current time, press the CLOCK button, and the time will display.

Fan speed display
 Displays the selected fan speed, AUTO (Auto) and three fan speed levels (LOW) (MED) (HIGH) can be indicated. The fan speed is auto controlled under AUTO or DRY mode.

 
Lock Display
 Displayed when LOCK mode is activated.

Sleep Display
 Displayed under sleeping operation. Press the SLEEP button again to remove.

I FEEL Display
 Displayed when I FEEL function is activated.

Note:
 All displays on the remote control are shown for illustration purposes only.

How to use the buttons

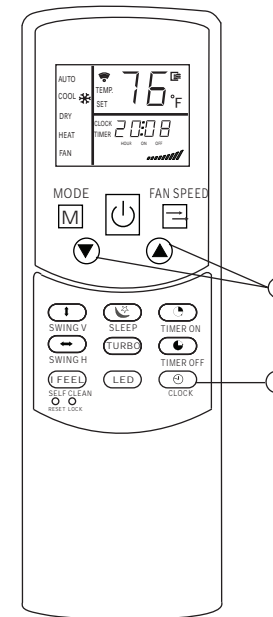

Before you start operating the air conditioner, set the clock of the remote control using the procedures given in this section. The clock panel on the remote control will display the time regardless of whether the air conditioner is in use or not.

Initial Setting the Clock

After batteries are inserted in the remote control, the clock panel will display "12:00" and begin to flash.

1. UP/DOWN button

- Press these buttons to set time.
 - ▲ Forward.
 - ▼ Backward.
- Each time you press the button, the time moves forward or backward by one minute depending on which side you press. The time alters as quickly as you push the button.
- Keep pressing the button without releasing, the time moves forward or backward by 10 minutes depending on which side you press.

2. CLOCK button

When the right time is achieved, press the CLOCK button or release the ▲ or ▼ and wait for 5 seconds, the clock time stops flashing and the clock starts operating.

3. Readjusting the Clock

 
Press the CLOCK button on the remote controller, the time of the clock display will start to flash. To set the new time, follow 1 and 2 of "Initial Setting of the Clock".

Note: The time of the CLOCK must be set before the AUTO-TIMER feature will operate.

* Clock accuracy is within 15 seconds per day.

CAUTION

Static electricity or other factors (Voltage transients) can cause the remote controller clock to initialize. If your remote controller is initialized (the time of "12:00" flashing), readjust the clock before starting the unit.

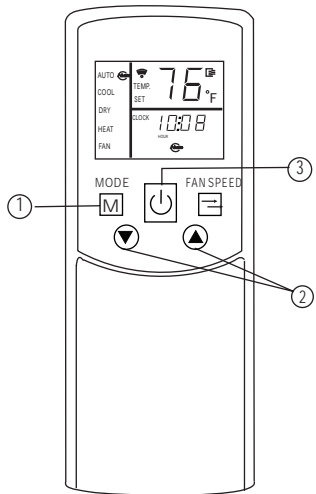


Auto operation

Ensure the unit is plugged in and power is available. The OPERATION indicator on the display panel of the indoor unit starts flashing.

1. Press the **MODE** button to select Auto.
2. Press the **UP/DOWN** button to set the desired temperature. The temperature can be set within a range of 62°F~86°F in 1°F increments.
3. Press the **ON/OFF** button to start the air conditioner.

NOTE:

 1. In the Auto mode, the air conditioner can logically choose the mode of Cooling, Fan, and Heating by sensing the difference between the actual ambient room temperature and the setting temperature on the remote controller.
2. In the Auto mode, you can not switch the fan speed. It has already been automatically controlled.
3. If the Auto mode is not comfortable for you, the desired mode can be selected manually.

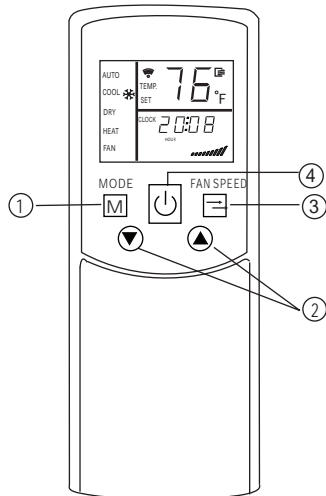


Cooling /Heating/Fan operation

Ensure the unit is plugged in and power is available.

1. Press the **MODE** button to select COOL, HEAT, (cooling & heating models only) or FAN mode.
2. Press the **UP/DOWN** buttons to set the desired temperature. The temperature can be set within a range of 62°F~86°F in 1°F increments.
3. Press the **FAN SPEED** button to select the fan speed in four steps- Auto, Low, Med, or High.
4. Press the **ON/OFF** button to start the air conditioner.

NOTE:

 In the FAN mode, the setting temperature is not displayed in the remote controller and you are not able to control the room temperature either. In this case, only step 1, 3 and 4 may be performed.

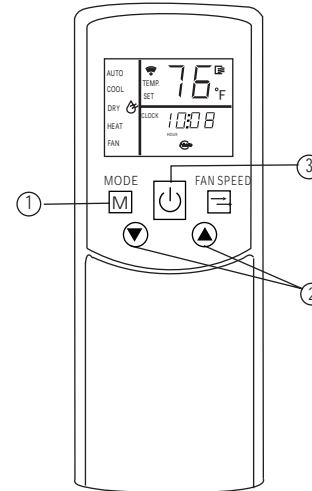

Dehumidifying operation

Ensure the unit is plugged in and power is available. The OPERATION indicator on the display panel of the indoor unit starts flashing.

 
1. Press the **MODE** button to select DRY mode.
2. Press the **UP/DOWN** buttons to set the desired temperature. The temperature can be set within a range of 62°F~86°F in 1°F increments.
3. Press the **ON/OFF** button to start the air conditioner.

NOTE:

In the Dehumidifying mode, you can not switch the fan speed. It has already been automatically controlled.

Timer operation

Press the TIMER ON button to set the auto-on time of the unit. And press the TIMER OFF button to set the auto-off time of the unit.

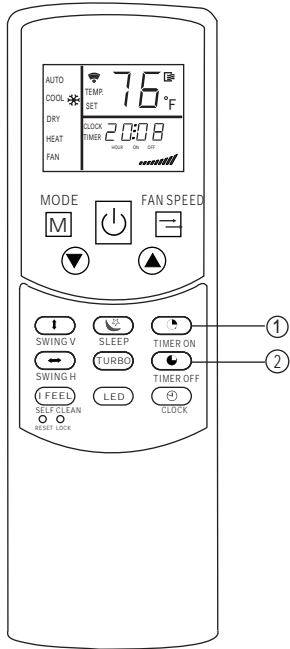

To set the Auto-on time.

1. Press the TIMER ON button. The remote control shows TIMER ON, the last Auto-on setting time and the signal "HOUR" will be shown on the LCD display area. Now it is ready to reset the Auto-on time to START the operation.
2. Push the TIMER ON button again to set desired Auto-on time. Each time you press the button, the time increases in 30 minutes increments, up to 10 hours, then at 1 hour increments up to 24 hours.
3. After setting the TIMER ON, there will be a one-half second delay before the remote control transmits the signal to the air conditioner. Then, after approximately another 2 seconds, the signal "HOUR" will disappear and the set temperature will re-appear on the LCD display window.

To set the Auto-off time.

1. Press the TIMER OFF button. The remote control shows TIMER OFF, the last Auto-off setting time and the signal "HOUR" will be shown on the LCD display area. Now it is ready to reset the Auto-off time to START the operation.
2. Push the TIMER OFF button again to set desired Auto-off time. Each time you press the button, the time increases in 30 minutes increments, up to 10 hours, then at 1 hour increments up to 24 hours.
3. After setting the TIMER OFF, there will be a one-half second delay before the remote control transmits the signal to the air conditioner. Then, after approximately another 2 seconds, the signal "HOUR" will disappear and the set temperature will re-appear on the LCD display window.

 
IMPORTANT

- The effective operation time set by the remote control for the timer function is limited to the following settings: 0.5, 1.0, 1.5, 2.0, 2.5, 3.0, 3.5, 4.0, 4.5, 5.0, 5.5, 6.0, 6.5, 7.0, 7.5, 8.0, 8.5, 9.0, 9.5, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23 and 24.

Example of Timer setting

TIMER ON (Auto-on Operation)

The TIMER ON feature is useful when you want the unit to turn on automatically before say when you return home. The air conditioner will automatically start operating at the set time.

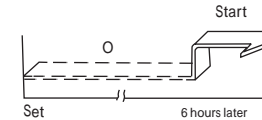

Example:

To start the air conditioner in 6 hours.

 
1. Press the TIMER ON button, the last setting of starting operation time and the signal "HOUR" will show on the display area.
2. Press the TIMER ON button to display "6.0" on the TIMER ON display of the remote control.
3. Wait for 3 seconds and the TIMER ON indicator stops flashing and this function is activated. The digital display area will show the temperature again.



TIMER OFF

(Auto-off Operation)

The TIMER OFF feature is useful when you want the unit to turn off automatically after you go to bed. The air conditioner will stop automatically at the set time.



Example:

To stop the air conditioner in 10 hours.

1. Press the TIMER OFF button, the last setting of stopping operation time and the signal "HOUR" will show on the display area.
2. Press the TIMER OFF button to display "10" on the TIMER OFF display of the remote control.
3. Wait for 3 seconds and the TIMER OFF indicator stops flashing and this function is activated. The digital display area will show the temperature again.



 
COMBINED TIMER

(Setting both ON and OFF timers simultaneously)

TIMER OFF → TIMER ON

(On → Stop → Start operation)

This feature is useful when you want to stop the air conditioner after you go to bed, and start it again in the morning when you wake up or when you return home.

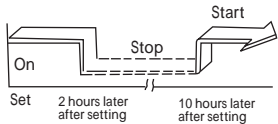

Example:

To stop the air conditioner 2 hours after setting and start it again 10 hours after setting.

1. Press the TIMER OFF button.
2. Press the TIMER OFF button again to display 2.0 HOUR on the TIMER OFF display.
3. Press the TIMER ON button.
4. Press the TIMER ON button again to display 10 HOUR on the TIMER ON display.
5. Wait for the remote control to display the setting temperature.



TIMER ON → TIMER OFF

(O → Start → Stop operation)

This feature is useful when you want to start the air conditioner before you wake up and stop it after you leave the house.

Example:

To start the air conditioner 2 hours after setting, and stop it 5 hours after setting.

1. Press the TIMER ON button.
2. Press the TIMER ON button again to display 2.0 HOUR on the TIMER ON display.
3. Press the TIMER OFF button.
4. Press the TIMER OFF button again to display 5.0 HOUR on the TIMER OFF display.
5. Wait for the remote control to display the setting temperature.

