




SPEEDEE TRIM LLC | P.O. BOX 411663 • SF CA 94141
SpeedeeTrim.com • Patent Pending

CORDED TRIMMER How to Insert, Change, and Clean Blades




Insert Blade

- By holding at the blade base, join the dual blades by sliding the rivet on one blade into the slot on the second blade. Align Blades.
- With the trimmer unplugged and safety lock applied, insert the blades into the receiving slot at the top until locked in place. Make sure the blades are locked in place before plugging in trimmer.

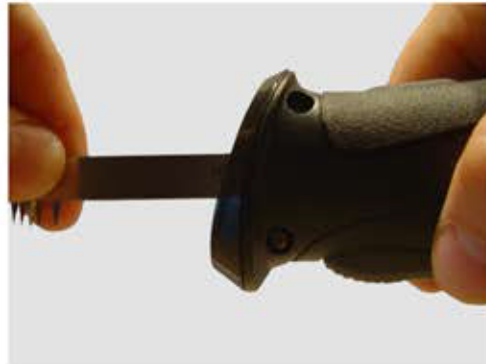

Remove Blade

- To remove blades, apply safety lock and unplug trimmer. Press the blade release button at top of trimmer while pulling the blades out by gripping them on either side.

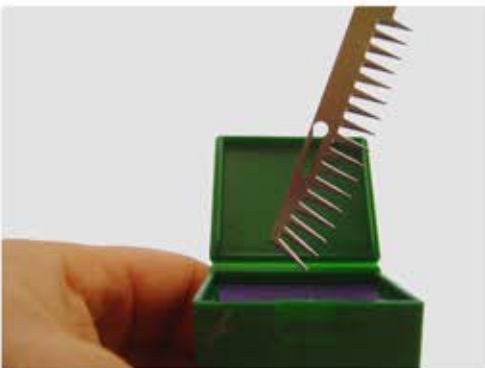

Cleaning Blade

- Fill the blade scrubber box to approximately 3/4 capacity with isopropyl alcohol.
- With the battery or cord disconnected, remove the dirty blades.
- Insert blade into the scrubber individually -repeat up and down motion.
- Never operate the trimmer while in the blade scrubber as this will damage the bristles.
- Never scrape or clean the blades with anything metal as this will dull the blades.
- Always clean blades thoroughly after each use.



SPEEDEE TRIM LLC | P.O. BOX 411663 • SF CA 94141
SpeedeeTrim.com • Patent Pending

CORDED TRIMMER

Specifications, Maintaining Blades, Proper Use, Safety Precautions, and Warranty

Specifications: (FOR INDOOR USE ONLY)

Electric trimmer specs: Charges from a 110V AC, 60Hz .04 AMPS

Maintaining Blades:

Always keep blades well lubricated for optimum performance. With the blades removed from unplugged trimmer, apply a few drops of salad oil (light weight multi-purpose household oil) in between blades. It may be necessary to do this several times during long periods of continuous use. Blades should be lubricated after cleaning and before each use. Very important, always clean blades thoroughly after after each use.

Proper Use: (For Indoor Use Only)

The angle that the blade is held at will determine the amount of material removed when trimming. When trimming leaves, be sure to trim with the blade perpendicular to the leaf to allow for the teeth to catch properly. This trimmer is solely intended for trimming small house -plants and shrubs no more than 1/16" in diameter. Also, be sure to keep trimmer above plants and flowers when trimming with the blade angled downward to the plant. Trimming from below can cause buildup of offcut material to get clogged in motor. Leather gloves and safety goggles should be worn when using to prevent injury.

Safety Precautions:

Read all instructions before operating. Save these instructions.
Make sure trimmer is off when not in use.
Do not let cord contact a hot surface.
Unplug trimmer before cleaning, installing, or removing blades.
Avoid contact with moving parts.
Always handle blades from the dull side or from the middle side
Do not operate trimmer under or in water.
Do not attempt to modify the plug if it doesn't fit in the wall outlet. Instead, contact a qualified electrician.
Always disconnect power before handling blades.
Do not allow children to operate this trimmer.
Do not use this trimmer for anything other than intended use.
Do not operate knife in water or under running water.
Always handle blades on dull side away from cutting edge.
Do not use outdoors.
Wear heavy gloves and safety goggles when using trimmer.
Never submerge in water or liquid as they may cause shock, injury or electrocution.
Keep cord out of the way of trimming area so it is not nicked or cut during operation.
Do not operate with damaged or frayed cords as the unit may malfunction or cause injury or electric shock.
Do not use while drinking or under the influence of alcohol or while on medication.
Do not attempt to cut any plant stems or foliage with a thickness greater than 1/16 of 1 inch.
Warning! The teeth are very sharp and the trigger is very sensitive.
Keep fingers and all body parts away from blades whenever trimmer is plugged in.

One Year Limited Warranty:

For the period indicated, SPEEDEE TRIM INC. will, at its option, repair or replace and return the covered items found to be defective in material or workmanship at no charge except for shipping cost. SPEEDEE TRIM INC. will have no other obligation and will not be liable for incidental or consequential damages. SPEEDEE TRIM INC. makes no implied warranty of merchantability or fitness for any period beyond the stated duration of each Limited Warranty. This Warranty does not cover damage by addition or alteration of the product, accidental damage or loss, abuse, failure to provide reasonable and necessary maintenance or normal expected wear. Damage that is determined to be of this nature will be repaired at consumer's expense. This warranty does not extend to products which are put to commercial or rental use. This warranty extends only to the original purchaser of this product, and does not give any rights to any other person. Some states do not allow exclusions of incidental or consequential damages or limitations of the duration of implied warranties, so the above exclusion limitation may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.