


INSTRUCTIONS

INSTRUCTIONS

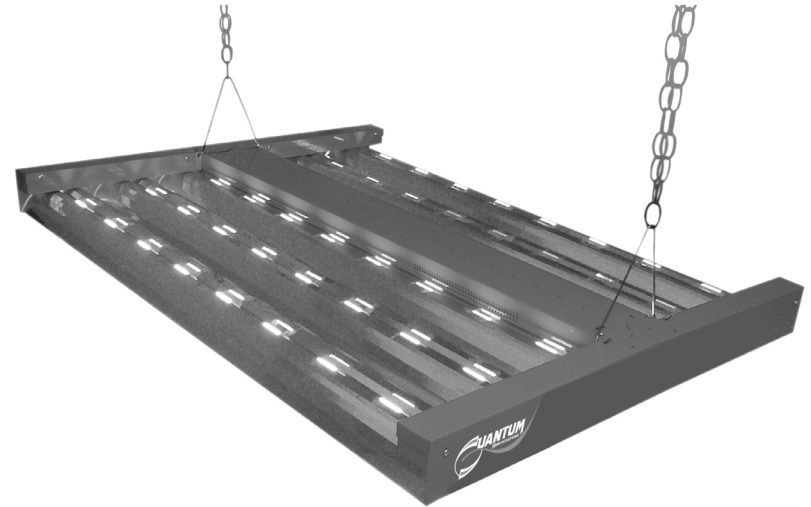

4 FOOT, 12 BULB & 16 BULB T5 FIXTURE



5-YEAR LIMITED WARRANTY

Hydrofarm, Inc. warrants the product to the original owner to be free of defects in material and workmanship for a period of five years from the date of receipt.

INSTRUCTIONS


This folding fixture is designed for ultimate output, light weight and efficiency. The all-aluminum construction is very rigid once assembled. Gentle handling is required for initial frame assembly. Please follow the instructions listed below.

Assembly Instructions:


1. Remove reflector from box and place on a firm flat surface. Remove the hardware packet and verify that all parts are included. A detailed hardware list is located below.




2. Remove the protective film from the reflectors.

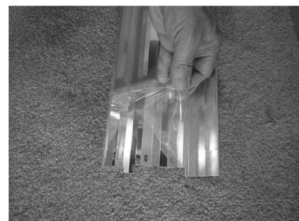

3. Open the fixture by folding out the arms. Be cautious not to crimp any of the wires between the metal portions of the fixture. The unit will now appear in an H configuration. Temporarily insert two T5 lamps into the outermost lamp socket on each end. This will help keep the unit square during assembly. Please note T5 lamps are sold separately.

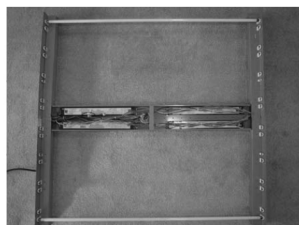

4. Screw two reflector panels in the second inward set of sockets as shown at right. Do not over-tighten screws when installing any of the reflectors or structural screws. If using a power drill set the choke on level 6 or less.

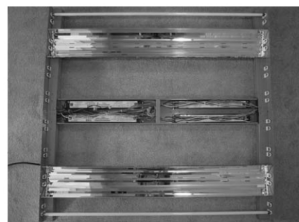

5. Temporarily insert two more T5 lamps in the innermost sockets to make sure the socket is snug on the lamp.



PARTS LIST - QT5012

PART NAME	QUANTITY
V-Hook	2
M4x12 Screws	8
M4x8 Screws	28

PARTS LIST - QT5016


PART NAME	QUANTITY
V-Hook	2
M4x12 Screws	8
M4x8 Screws	36

INSTRUCTIONS


6. Locate the middle (both sides) where the two arms meet. Locate the small brackets and swing each bracket into place to allow the two portions of the fixture to be connected. Helpful hint: If assembling alone, place one corner of the fixture against a wall to help get the unit as square as possible.



7. Remove the inner T5 lamps and begin adding the additional reflectors into place. Start from center portion of fixture and move outwards. Lastly, remove the outer T5 lamps and install the remaining two reflectors.

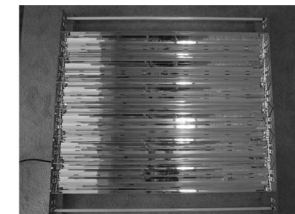

8. Rotate fixture upwards (top portion) and begin adding the remaining structural screws. Structural screws are required on top and both sides of the fixture.

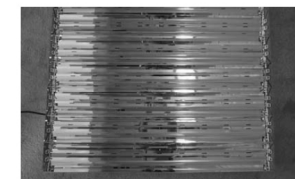

9. Begin installing all T5 lamps. Make sure all sockets are tight to lamps. If not, make slight adjustments for tight fit.



10. Attach "V" Hooks and you are ready to hang the unit.

