

SuperSprouter™

YOUR BEST START FOR SEEDS AND CUTTINGS™

www.supersprouter.com



How to Assemble Your New SuperSprouter™ Root Rain® Spray Cloner

INSTRUCTIONS

1. Except for the water pump and sprayer manifold, rinse all parts in lukewarm water.
2. The orientation of the red sprayers was factory set for better spraying coverage (**Figure A**). If you feel customization of the spray pattern is required; simply rotate the red sprayers as required.
3. Carefully fit the water pump onto spray manifold. To prevent breaking the manifold tube, avoid using excessive force.
4. Use the pump suction cups to adhere the pump to the base of the tub (**Figure B**). Place the pump into position as shown in photo (**Figure C – note the mark in the center of the tub base and the position of the power cord**). Feed the power cord through the slot in the rim on the short side of tub.
5. Unpack the EcoPlus® Eco Air 1 Plus pump and Air Stone. Connect the air stone to the pump via the supplied vinyl tubing. Place the air stone in the bottom of the tub opposite of the water intake on pump. Feed the vinyl tubing through the other slot in the rim on the short side of the tub (**Figure D**).
6. Air pump should be placed and kept higher in elevation than the water line (**Figure E**).
7. Before putting clones into the system, fill the water to a level just under the red sprayers in the tub. Then, place the lid back on. Turn on the machine to rinse all internal parts. Run for at least 5 minutes. Then, discard and replace the water. Repeat this procedure.
8. For a correct fit, place the lid on the base as seen in (**Figure F**). Ensure that it is water-tight.

Figure A



Figure B



Figure C




Figure D



Figure E



Figure F

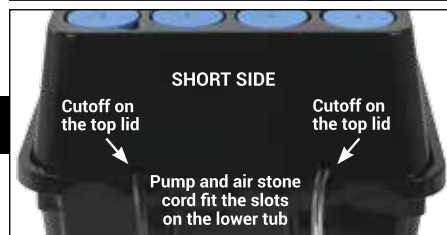

✓ PLEASE DOUBLE CHECK YOUR ASSEMBLY TO ENSURE IT IS THE SAME AS **FIGURE F** BEFORE USING THE PRODUCT!