autopilot PX2 Advanced Digital & Analog Lighting Controller (APDPX2)



ZONE A

Controls up to 50 LED fixtures.

ZONE B

Controls up to 256 HID fixtures.



PHOTO·LOC 0-10V Cable Kit CHC882000B



- For use with PHOTOBIO X, M, T, and T Duo
- Includes 2 cables and 1 T Connector

- 1 Attach **ORANGE** end of cable to the black side of the
- 2 Attach BLACK end of cable to the orange side of T connector.

T connector.


- 3 Attach BLACK end of cable to the bottom orange side of the T connector.
- 4 Attach ORANGE end of cable to the black connector on fixture.

Cable Guide

Checkerboard

LED + DUAL CMH





Fixtures are not shown to scale.

LEGEND: LED Fixtures

LED Link Cable PHOTO-LOC

Cable CHC882000B

Female end Male end

T Connector

LEGEND: HPS, MH & CMH


Data Link Cable

RJ12

T-Connector

- RJ12 to RJ12

RJ12 to USB

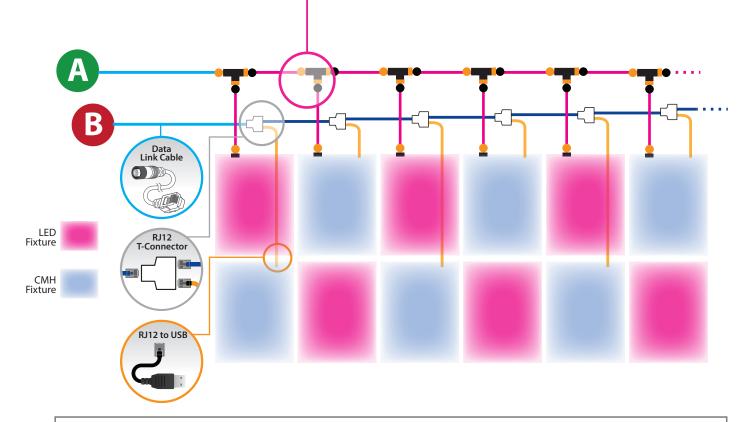



IMPORTANT: Do not attach data link cables to AC power cable. Always keep low voltage data cables and high voltage AC power harness as far as possible from each other for stable signal transmission. Avoid coiling data cables as well as AC harnesses in tight coils. Excess cable should be managed by creating long loops as opposed to tight coils.